

Upute za promjenu CROPOS IP adrese u Trimble Access-u


1. Odaberi "Podešenja"




2. Odaberi "Spoji"



3. Odaberi "GNSS kontakti"

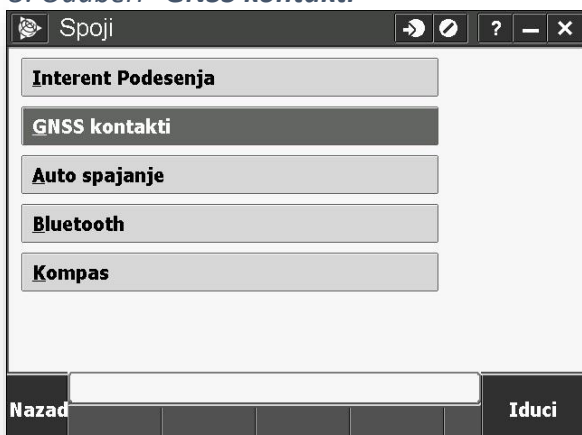

4. Odaberi GNSS kontakt i pritisni "Edit"

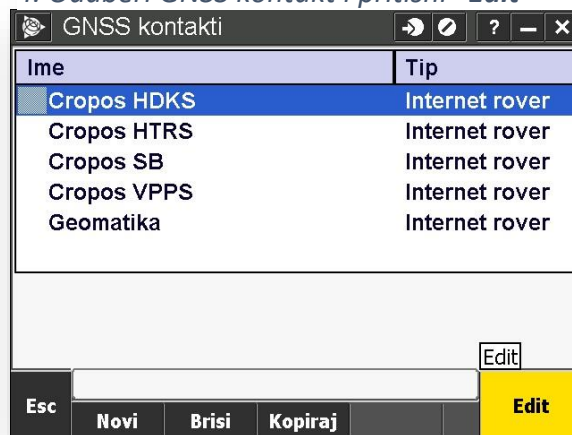

5. Otvori stranu "2/2" postavki GNSS



6. Promijeni IP adresu i pohrani

